




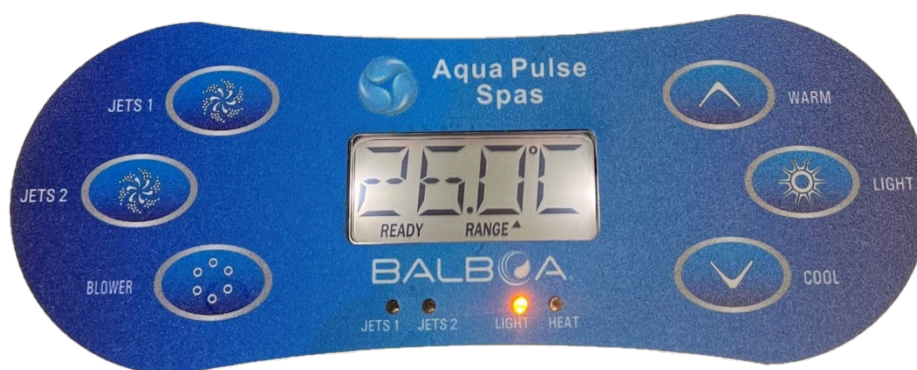


BALBOA TP600 TOUCHPAD
BRONTE & EMERALD LUXURY PLATINUM SPAS

BUTTON	FUNCTION
	WARM
	COOL
	JETS
	LIGHT
	BLOWER



Page 2.	SETTING THE TIME CLOCK 12HR TIME
Page 2.	SETTING THE MODE FOR HEATING ON DEMAND
Page 2.	HOW TO FILP SCREEN DISPLAY
Page 3.	SETTING FILTER CYCLE 1
Page 4.	SETTING FILTER CYCLE 2
Page 5.	ADJUST TEMPERATURE READING BETWEEN F/C
Page 5.	HOW TO LOCK & UNLOCK THE TEMPERATURE
Page 6.	HOW TO LOCK & UNLOCK THE TOUCHPAD
Page 7.	ADJUST TEMPERATURE BETWEEN LOW & HIGH RANGE
Page 7.	ADJUST TEMPERATURE

BALBOA TP600 TOUCHPAD

BRONTE & EMERALD LUXURY PLATINUM SPAS

SETTING THE CLOCK TIME 12 HOUR TIME

Using the clock A or P will appear on the bottom right of the display to indicate A for am & P for pm.



Press warm until the temperature flashes.



Press the light button three times until 'TIME' appears.



Press the warm button to adjust the hour.



Press the light button to set the hour.



Press the temp button to adjust the minutes.



Press the light button to set the minutes.

Once the time has been set the spa will take you back to the current water temperature.

SETTING THE MODE FOR HEATING ON DEMAND

Ready Mode allows the heater to run whenever heat is required to maintain a desired temperature.

Ready in Rest Mode allows the heater to run only while filter cycle 1 or filter cycle 2 is running, this will not maintain a desired temperature.



Press warm until the temperature flashes.



Press the light button twice until 'MODE' appears.



Press the warm button to adjust to 'READY or REST RANGE'



Press the light button to set.

Once the mode has been set the spa will take you back to the current water temperature.

HOW TO FLIP SCREEN DISPLAY



Press warm until the temperature flashes.



Press the light button four times.

The word FLIP will appear on the display.



Press the warm button once to rotate the screen.



Press the light button to set.

Now the current water temperature will be displayed.

BALBOA TP600 TOUCHPAD

BRONTE & EMERALD LUXURY PLATINUM SPAS

Flip allows the touchpad to be read from either inside or outside of the spa.

SETTING THE FILTER CYCLE 1



Press warm until the temperature flashes.



Press the light button seven times until 'FLTR 1' appears.



Press the warm button once.

BEGN will now display.



Press the warm button to adjust the hours.



Press the light button to set hour.



Press the warm button to adjust the minutes.



Press the light button to set minutes.

The display will now show 'RUN HRS'



Press the warm button to adjust the hours.

SET THE DURATION ONLY NOT THE TIME OF DAY, SO FOR 2 HOURS SELECT 2:00



Press the light button to set the hour.



Press the warm button to adjust the minutes.



Press the light button to set the minutes.

This will now display what time of day the filter cycle will end.



Press the warm button once to go back to the current water temperature.

BALBOA TP600 TOUCHPAD

BRONTE & EMERALD LUXURY PLATINUM SPAS

SETTING THE FILTER CYCLE 2



Press warm until the temperature flashes.



Press the light button eight times until 'FLTR 2' appears.



Press warm until the word 'ON' appears on the touchpad.



Press the light button to set.

The display will now show BEGN



Press the warm button once.



Press the warm button to adjust the hours.



Press the light button to set hour.



Press the warm button to adjust the minutes.



Press the light button to set minutes.

The display will now show 'RUN HRS'



Press the warm button to adjust the hours.

SET THE DURATION ONLY NOT THE TIME OF DAY, SO FOR 2 HOURS SELECT 2:00



Press the light button to set the hour.



Press the warm button to adjust the minutes.



Press the light button to set the minutes.

This will now display what time of day the filter cycle will end.



Press the warm button once to go back to the current water temperature.

BALBOA TP600 TOUCHPAD

BRONTE & EMERALD LUXURY PLATINUM SPAS

ADJUST TEMPERATURE READING BETWEEN F/C



Press warm until the temperature flashes.



Press the light button nine times until '**PREF**' appears.



Press the warm button once.

The word "F/C" will appear on the display.



Press the warm button to adjust to **Fahrenheit (F) or degrees Celsius**



Press the light button to set.



Press the light button twice now the current water temperature will appear.

HOW TO LOCK & UNLOCK THE TEMPERATURE

LOCKING THE TEMPERATURE



Press warm until the temperature flashes.



Press the light button five times until '**LOCK**' appears.

The word lock will appear on the display.



Press the temp button three times to turn the lock on.



Press the light button to set.

In lock mode it will not allow you to make changes to the temperature.

UNLOCKING THE TEMPERATURE



Hold the warm button in.



Press the light button twice until '**UNLOCK**' appears.

The word unlock will appear on the display.

BALBOA TP600 TOUCHPAD BRONTE & EMERALD LUXURY PLATINUM SPAS

HOW TO LOCK AND UNLOCK TOUCHPAD

LOCKING THE TOUCHPAD



Press warm until the temperature flashes.



Press the light button five times until '**LOCK**' appears.

The word lock will appear on the display.



Press the warm button once.



Press the light button once.



Press the warm button once.



Press the warm button once.



Press the light button once.

In this mode the entire touchpad is locked.

UNLOCKING THE TOUCHPAD



Hold the warm button in.



Press the light button twice until '**UNLOCK**' appears.

The word unlock will appear on the display.

BALBOA TP600 TOUCHPAD

BRONTE & EMERALD LUXURY PLATINUM SPAS

ADJUST TEMPERATURE BETWEEN LOW AND HIGH RANGE



Press warm until temperature flashes.



Press the light button once until **'TEMP'** appears.

The word "TEMP" will appear on the display.



Press warm button once to go into high range.



Press cool button once to go into low range.



Press the light button once to set.



Low range will keep the spa between 10 – 37 degrees.



High Range will keep the spa between 37- 40 degrees.

ADJUST TEMPERATURE



Press warm to increase the temperature.



Press cool to decrease the temperature.

If you want the spa to heat above 37 degrees make sure the spa is in high range with the arrow facing up.

If you want the spa to heat below 37 degrees make sure the spa is in low range with the arrow facing down.